

## IMPORTANT SAFETY INSTRUCTIONS

When using this product, basic precautions should always be followed, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The instructions for class III appliances shall state that it must only be supplied at safety extra-low voltage corresponding to the marking on the appliance.

### DANGER

1. Do not use wet hand to plug and pull the power cord, keep the power cord away from sticky liquid or other liquid.
2. This product contains a built-in rechargeable battery. Do not drop the battery into fire and never charge, use or place it at the place where temperature is high.
3. Do not use the hair trimmer when its power cord or adapter is damaged or when the connection between it and the electric outlet is loose.

**Warning: Please keep the hair trimmer's body dry.**


### WARNING

1. Ensure to keep the power cord and this product dry. Do not rinse the hair clipper with water.
2. Before connecting the power cord and charging, make sure that the voltage marked on the body of this product matches the local power supply voltage.
3. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department for replacement.
4. Please use and store this product at a place where the temperature is between 5 C and 35 C.
5. When any abnormality or malfunction of this product is found, stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to the maintenance department of our company for repair.
6. Do not use broken or damaged trimming comb.
7. Do not disassemble the hair trimmer's body for battery replacement.
8. Do not immerse this product in water or any liquid.
9. Do not knock down or drop this product. If it is damaged due to collision or fall, please stop using it.
10. Please do not use it on animals.

## PACKAGE CONTENTS



## PRODUCT OVERVIEW

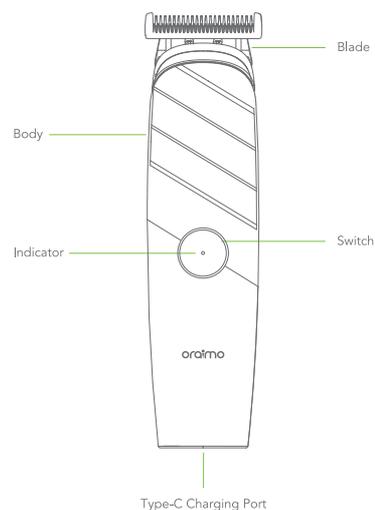

## PRODUCT SPECIFICATIONS

Input: 5V=1A  
Full Run Time: 1.5 hours  
Battery Capacity: 600mAh

Charging Time: 1.5 hours  
Input Type: Type-C  
\*oraimo Lab test results

For more information, please visit:



[www.oraimo.com](http://www.oraimo.com)



@oraimo\_accessories

## USAGE INSTRUCTIONS

### PREPARATION


Before first use, please ensure that the trimmer is fully charged. You can remove the attached guide comb or change to another according to your hair-cutting needs.

### HAIR TRIMMING

Press to turn on the switch and then move the blade head slowly against the direction of hair growth and move in a straight and circuitous way.

### CHARGE THE TRIMMER

⚡ Charge your trimmer with the attached Type-C charging cable.

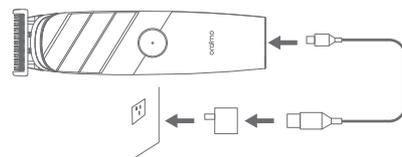

\*A full charge takes around 1.5 hours, the clipper can be used for 1.5 hours when fully charged.

## MAINTENANCE

1. Be sure to disconnect the power supply and shut down the product before cleaning, take out the attached comb (if a guide comb is used), and gently brush the remaining hair on the blade with the provided cleaning brush.

2. After cleaning, in order to obtain better effect of the blade, if necessary, drop a drop of lubricating oil on the top left, middle and right of the blade head, and switch on the clipper for several times. Wipe the surface of the outer blade head, so as to keep it sharp, rotate it lightly and prevent abrasion.

3. When the trimmer is not in use, put the protective cover on the blade to prevent damage to the blade.

# oraimo

## WELCOME GUIDE

SmartTrimmer Home | OTR-210 |

\*Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.